

Canister Turbine Installation Instructions

DANSK-A485 DA400RCA DA400RC

Removal

Step 1



Remove back cap.

Use cap tool to remove back cap from handpiece.

Using pliers can cause damage to the cap and head of handpiece.

Step 2



Remove existing turbine.

Push the bur against a hard surface, like a table, to push turbine out of the head of the drill.

Installation

Step 1



Install turbine.

Locate the small alignment ball on the upper turbine surface, opposite side of the two holes. Then, install by sliding this ball into the handpiece canister's slot

Step 2



Re-install cap.

Use cap tool to re-install back cap from handpiece.

Using pliers can cause damage to the cap and head of handpiece.

Maintenance

- Lubricate handpiece before each use
- Use alcohol to clean handpiece
- Do not use any chemicals or chlorine
- Do not put handpiece in an ultrasonic cleaner
- Follow instructions in owner's manual for autoclave instructions

Sca tute

Scan to watch tutorial video

How to Lubricate High-speed Handpiece

Step 1



Step 2

Locate ports towards the back end Midwest tubing.

Step 3

Spray generous amount of lubricant into the smaller of the 2 larger ports.

Step 4

Connect and screw back handpiece onto tubing.

Step 5

Run handpiece for 20-30 seconds. This will help run the lubricant through the turbine.



CAUTION

Failure to lubricate handpiece before/after use will void the warranty.

Helpful Parts to Remember









All-in-One Cleaner and Lubricant Part #: DA100JP



Need more help?



