DENTALAIRE

LED Swivel High-speed Handpiece
Quick Start Guide


DA400LEDLHS



How to Lubricate the Handpiece

Lubricate handpiece right before every dental.

1. Unscrew handpiece and remove from tubing.



2. Locate ports on the bottom of handpiece.



3. Spray generous amount of lubricant into the smaller of the 2 larger ports.




4. Connect and screw back handpiece onto tubing.

5. Run handpiece for 20-30 seconds.
This will help run the lubricant through the turbine.

How to Insert Bur

1. Press end cap button firmly and push bur in until it stops.

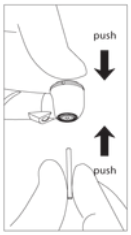


ALWAYS put bur all the way in.

NEVER put bur in just half way.

How to Remove Bur

1. Firmly press end cap button and pull out bur.

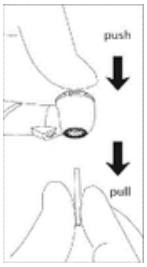

DO NOT run the high-speed handpiece without a bur in it. This will damage the chuck.

How to Clean Handpiece

1. Following your country specific directives, standard and guidelines Steam sterilization class B (pre and post vacuum) with sterilizers in accordance with EN 13060. Sterilization holding time a minimum of 3 minutes at 134˚C (273˚ F)

OR

2. Steam sterilization class S with sterilizers in accordance with EN 13060. The sterilizer manufacturer must give the express approval for the sterilization of turbine handpieces. Sterilization holding time a minimum of 3 minutes at 134˚C (273˚ F)

Need more help?

(800) 866-6881 info@dentalaire.com

PARTS AND ACCESSORIES

DA100JP	All-In-One Cleaner and Lubricant
DA400LED LG TURB	LED Push Button Turbine, Large